



# Tower UPS T1.0kVA and T1.5kVA Installation and User's Guide



**Note:**

Before using this information and the product it supports, read the general information in Appendix B “Getting help and technical assistance” on page 31, Appendix C “Notices” on page 35, the safety information, warranties, and licenses information on the Lenovo Web site at:

<https://support.lenovo.com/documents/LNVO-DOCS>

**Second Edition (February 2017)**

**© Copyright Lenovo 2015, 2017.**

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration “GSA” contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925

# Contents

<b>Safety</b> . . . . .	<b>iii</b>	Mounting the new battery pack . . . . .	24
Guidelines for trained service technicians . . . . .	iv	<b>Chapter 7. Troubleshooting and maintenance</b> . . . . .	<b>25</b>
Inspecting for unsafe conditions . . . . .	iv	Alarms and faults. . . . .	25
Guidelines for servicing electrical equipment . . . . .	v	Service and support . . . . .	26
Safety statements . . . . .	vi	<b>Chapter 8. Parts listing</b> . . . . .	<b>27</b>
Product safety . . . . .	x	<b>Appendix A. Technical specifications</b> . . . . .	<b>29</b>
<b>Chapter 1. Introduction</b> . . . . .	<b>1</b>	<b>Appendix B. Getting help and technical assistance</b> . . . . .	<b>31</b>
Notices and statements . . . . .	1	Before you call. . . . .	31
Environmental protection . . . . .	1	Using the documentation . . . . .	32
<b>Chapter 2. Presentation</b> . . . . .	<b>5</b>	Getting help and information from the World Wide Web . . . . .	32
Standard installations . . . . .	5	How to send DSA data . . . . .	32
Rear panels . . . . .	5	Creating a personalized support web page . . . . .	32
Control panel . . . . .	7	Software service and support. . . . .	33
LCD description . . . . .	7	Hardware service and support . . . . .	33
Display functions. . . . .	9	Taiwan product service . . . . .	33
User settings . . . . .	9	<b>Appendix C. Notices.</b> . . . . .	<b>35</b>
<b>Chapter 3. Installation</b> . . . . .	<b>13</b>	Trademarks . . . . .	36
Unpacking and contents check . . . . .	13	Important notes . . . . .	36
Battery module connection. . . . .	13	Recycling information . . . . .	36
Installation of tower models . . . . .	14	Particulate contamination . . . . .	37
Installing the communication card . . . . .	14	Telecommunication regulatory statement . . . . .	37
<b>Chapter 4. Communication</b> . . . . .	<b>17</b>	Electronic emission notices. . . . .	37
Communication ports . . . . .	17	Federal Communications Commission (FCC) statement. . . . .	37
Characteristics of the optocouplers communication port. . . . .	17	Industry Canada Class A emission compliance statement. . . . .	38
Connecting the RS232 or USB communication port . . . . .	17	Avis de conformité à la réglementation d'Industrie Canada . . . . .	38
Replacing the communication card . . . . .	18	Australia and New Zealand Class A statement. . . . .	38
<b>Chapter 5. Operation</b> . . . . .	<b>19</b>	European Union EMC Directive conformance statement. . . . .	38
UPS startup and shutdown. . . . .	19	Germany Class A statement . . . . .	38
Startup and Normal operation . . . . .	19	Japanese electromagnetic compatibility statements . . . . .	39
Starting the UPS on battery power . . . . .	19	Korea Communications Commission (KCC) statement. . . . .	40
Shutting down the UPS . . . . .	20	Russia Electromagnetic Interference (EMI) Class A statement . . . . .	40
Operation on battery power . . . . .	20	People's Republic of China Class A electronic emission statement . . . . .	41
Return of AC input power . . . . .	20		
UPS remote control functions. . . . .	20		
Remote control connection and test . . . . .	21		
Operating modes: summary . . . . .	21		
<b>Chapter 6. UPS maintenance</b> . . . . .	<b>23</b>		
Battery pack replacement . . . . .	23		
Safety considerations . . . . .	23		
Removing the battery tray on tower models . . . . .	23		

Taiwan Class A compliance statement . . . . 41  
Taiwan BSMI RoHS declaration . . . . . 42

**Index. . . . . 43**

---

## Safety

Before installing this product, read the Safety Information.

قبل تركيب هذا المنتج، يجب قراءة الملاحظات الأمنية

Antes de instalar este produto, leia as Informações de Segurança.

**在安装本产品之前，请仔细阅读 Safety Information (安全信息)。**

安裝本產品之前，請先閱讀「安全資訊」。

Prije instalacije ovog produkta obavezno pročitajte Sigurnosne Upute.

Před instalací tohoto produktu si přečtěte příručku bezpečnostních instrukcí.

Læs sikkerhedsforskrifterne, før du installerer dette produkt.

Lees voordat u dit product installeert eerst de veiligheidsvoorschriften.

Ennen kuin asennat tämän tuotteen, lue turvaohjeet kohdasta Safety Information.

Avant d'installer ce produit, lisez les consignes de sécurité.

Vor der Installation dieses Produkts die Sicherheitshinweise lesen.

Πριν εγκαταστήσετε το προϊόν αυτό, διαβάστε τις πληροφορίες ασφάλειας (safety information).

לפני שתתקינו מוצר זה, קראו את הוראות הבטיחות.


A termék telepítése előtt olvassa el a Biztonsági előírásokat!

Prima di installare questo prodotto, leggere le Informazioni sulla Sicurezza.

製品の設置の前に、安全情報をお読みください。

본 제품을 설치하기 전에 안전 정보를 읽으십시오.

Пред да се инсталира овој продукт, прочитајте информацијата за безбедност.

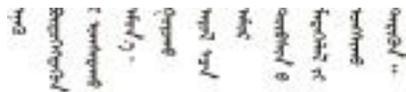

Les sikkerhetsinformasjonen (Safety Information) før du installerer dette produktet.

Przed zainstalowaniem tego produktu, należy zapoznać się z książką "Informacje dotyczące bezpieczeństwa" (Safety Information).

Antes de instalar este produto, leia as Informações sobre Segurança.

Перед установкой продукта прочтите инструкции по технике безопасности.

Pred inštaláciou tohto zariadenia si pečítajte Bezpečnostné predpisy.

Pred namestitvijo tega proizvoda preberite Varnostne informacije.

Antes de instalar este producto, lea la información de seguridad.

Läs säkerhetsinformationen innan du installerar den här produkten.

ཐོན་ཇས་འདི་བདེ་སྤྱོད་མ་བྱས་གོང་། སྐྱར་གྱི་ཡིད་གཟབ་  
བྱ་འདུ་མིན་ཡིད་པའི་འོད་ཟླར་བརྟེན་དགོས།

Bu ürünü kurmadan önce güvenlik bilgilerini okuyun.

بىز كۆز مەسئۇلاتىنى ئورتىقىشىمىز بۇرۇن بىخەتەرلىك ئۇچۇرلىرىنى ئوقۇپ چىقىڭىز.

Youq mwngz yungh canjbinj neix gaxgong, itdingh zeu doeg aen  
canjbinj soengq cungj vahgangj ancien slusik.

---

## Guidelines for trained service technicians

This section contains information for trained service technicians.

### Inspecting for unsafe conditions

Use this information to help you identify potential unsafe conditions in a Lenovo product that you are working on.

Each Lenovo product, as it was designed and manufactured, has required safety items to protect users and service technicians from injury. The information in this section addresses only those items. Use good judgment to identify potential unsafe conditions that might be caused by alterations or attachment of non-Lenovo features or optional devices that are not addressed in this section. If you identify an unsafe condition, you must determine how serious the hazard is and whether you must correct the problem before you work on the product.

Consider the following conditions and the safety hazards that they present:

- Electrical hazards, especially primary power. Primary voltage on the frame can cause serious or fatal electrical shock.
- Explosive hazards, such as a damaged CRT face or a bulging capacitor.
- Mechanical hazards, such as loose or missing hardware.

To inspect the product for potential unsafe conditions, complete the following steps:

1. Make sure that the power is off and the power cords are disconnected.
2. Make sure that the exterior cover is not damaged, loose, or broken, and observe any sharp edges.
3. Check the power cords:
  - Make sure that the third-wire ground connector is in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
  - Make sure that the power cords are the correct type.

- Make sure that the insulation is not frayed or worn.
- 4. Remove the cover.
- 5. Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.
- 6. Check inside the system for any obvious unsafe conditions, such as metal filings, contamination, water or other liquid, or signs of fire or smoke damage.
- 7. Check for worn, frayed, or pinched cables.
- 8. Make sure that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

## **Guidelines for servicing electrical equipment**

Observe these guidelines when you service electrical equipment.

- Check the area for electrical hazards such as moist floors, nongrounded power extension cords, and missing safety grounds.
- Use only approved tools and test equipment. Some hand tools have handles that are covered with a soft material that does not provide insulation from live electrical current.
- Regularly inspect and maintain your electrical hand tools for safe operational condition. Do not use worn or broken tools or testers.
- Do not touch the reflective surface of a dental mirror to a live electrical circuit. The surface is conductive and can cause personal injury or equipment damage if it touches a live electrical circuit.
- Some rubber floor mats contain small conductive fibers to decrease electrostatic discharge. Do not use this type of mat to protect yourself from electrical shock.
- Do not work alone under hazardous conditions or near equipment that has hazardous voltages.
- Locate the emergency power-off (EPO) switch, disconnecting switch, or electrical outlet so that you can turn off the power quickly in the event of an electrical accident.
- Disconnect all power before you perform a mechanical inspection, work near power supplies, or remove or install main units.
- Before you work on the equipment, disconnect the power cord. If you cannot disconnect the power cord, have the customer power-off the wall box that supplies power to the equipment and lock the wall box in the off position.
- Never assume that power has been disconnected from a circuit. Check it to make sure that it has been disconnected.
- If you have to work on equipment that has exposed electrical circuits, observe the following precautions:
  - Make sure that another person who is familiar with the power-off controls is near you and is available to turn off the power if necessary.
  - When you work with powered-on electrical equipment, use only one hand. Keep the other hand in your pocket or behind your back to avoid creating a complete circuit that could cause an electrical shock.
  - When you use a tester, set the controls correctly and use the approved probe leads and accessories for that tester.
  - Stand on a suitable rubber mat to insulate you from grounds such as metal floor strips and equipment frames.
- Use extreme care when you measure high voltages.
- To ensure proper grounding of components such as power supplies, pumps, blowers, fans, and motor generators, do not service these components outside of their normal operating locations.

- If an electrical accident occurs, use caution, turn off the power, and send another person to get medical aid.

---

## Safety statements

These statements provide the caution and danger information that is used in this documentation.

Each caution and danger statement in this documentation is labeled with a number. This number is used to cross reference an English-language caution or danger statement with translated versions of the caution or danger statement in the *Safety Information* document.

For example, if a danger statement is labeled D005, translations for that caution statement are in the *Safety Information* document under D005.

Be sure to read all caution and danger statements in this documentation before you perform the procedures. Read any additional safety information that comes with your system or optional device before you install the device.

### L001



**Hazardous voltage, current, or energy levels are present inside any component that has this label attached. Do not open any cover or barrier that contains this label. There are no serviceable parts inside these components. If you suspect a problem with one of these parts, contact a service technician.**

**DO NOT open up the chassis or any other parts of any UPS unit. This will void the unit warranty. Only replace parts for which a serviceable part exists, that is servicing any UPS unit is limited to FRU / CRU replacement parts.**

(L001)

### D005



**When working on or around the system, observe the following precautions: Electrical voltage and current from power, telephone, and communication cables are hazardous. To avoid a shock hazard:**

- **If Lenovo supplied a power cord(s), connect power to this unit only with the Lenovo-provided power cord. Do not use the Lenovo-provided power cord for any other product.**
- **Do not open or service any power supply assembly.**
- **Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.**
- **The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords.**

- Connect all power cords to a properly wired and grounded electrical outlet. Ensure that the outlet supplies proper voltage and phase rotation according to the system rating plate.
- Connect any equipment that will be attached to this product to properly wired outlets.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- Disconnect the attached power cords, telecommunications systems, networks, and modems before you open the device covers, unless instructed otherwise in the installation and configuration procedures.
- Connect and disconnect cables as described in the following procedures when installing, moving, or opening covers on this product or attached devices. To disconnect:
  1. Turn off everything (unless instructed otherwise).
  2. Remove the power cords from the outlets.
  3. Remove the signal cables from the connectors.
  4. Remove all cables from the devices.To connect:
  1. Turn off everything (unless instructed otherwise).
  2. Attach all cables to the devices.
  3. Attach the signal cables to the connectors.
  4. Attach the power cords to the outlets.
  5. Turn on the devices.
- Sharp edges, corners and joints might be present in and around the system. Use care when handling equipment to avoid cuts, scrapes and pinching. (D005)

C004



**CAUTION:**

Lead-acid batteries can present a risk of electrical burn from high, short-circuit current. Avoid battery contact with metal materials; remove watches, rings, or other metal objects, and use tools with insulated handles. To avoid possible explosion, do not burn.

Exchange only with the Lenovo-approved part. Recycle or discard the battery as instructed by local regulations. In the United States, Lenovo has a process for the collection of this battery. For information, call 1-800-426-4333. Have the Lenovo part number for the battery unit available when you call.

**DO NOT** mix old and new batteries in an Uninterruptible Power Supply unit.

**DO NOT** open up any battery pack retrieved from an Uninterruptible Power Supply unit.

Wear safety goggles for your own protection when replacing batteries of an Uninterruptible Power Supply unit. (C004)

C009



**CAUTION:**



or or The weight of this part or unit is between 18 and 32 kg (39.7 and 70.5 lb). It takes two persons to safely lift this part or unit. (C009)

**C010**



**CAUTION:**



or or The weight of this part or unit is between 32 and 55 kg (70.5 and 121.2 lb). It takes three persons to safely lift this part or unit. (C010)

**C022**



**CAUTION:**

This product might be equipped with a hard-wired power cable. Ensure that a licensed electrician performs the installation per the national electrical code. (C022)

**R001**

**Important:** The following general safety information should be used for all rack-mounted devices:



 **DANGER**

Observe the following precautions when working on or around your IT rack system:

- Heavy equipment—personal injury or equipment damage might result if mishandled.
- Always lower the leveling pads on the rack cabinet.
- Always install stabilizer brackets on the rack cabinet.
- To avoid hazardous conditions due to uneven mechanical loading, always install the heaviest devices in the bottom of the rack cabinet. Always install servers and optional devices starting from the bottom of the rack cabinet.

- **Rack-mounted devices are not to be used as shelves or work spaces. Do not place objects on top of rack-mounted devices.**



- **Each rack cabinet might have more than one power cord. Be sure to disconnect all power cords in the rack cabinet when directed to disconnect power during servicing.**
- **Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.**
- **An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock.**

(R001 part 1 of 2)



#### **CAUTION:**

- **Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack-mounted devices.**
- **Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.**
- **Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or overcurrent protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.**
- **(For sliding drawers) Do not pull out or install any drawer or feature if the rack stabilizer brackets are not attached to the rack. Do not pull out more than one drawer at a time. The rack might become unstable if you pull out more than one drawer at a time.**
- **(For fixed drawers) This drawer is a fixed drawer and must not be moved for servicing unless specified by the manufacturer. Attempting to move the drawer partially or completely out of the rack might cause the rack to become unstable or cause the drawer to fall out of the rack.**

(R001 part 2 of 2)

#### **Output power and ampere ratings**

**Important:** Make sure that the power receptacle is near the equipment and is easily accessible so that the uninterruptible power supply (UPS) can be disconnected quickly.

To reduce the risk of fire, connect only to a circuit provided with branch circuit overcurrent protection with an ampere rating in accordance with the National Electrical Code (NEC), ANSI/NFPA 70 or your local electrical code:

UPS output power	120 V	208 V	230 V
1500 VA	15 A	Not applicable	10 A
2200 VA	20 A	Not applicable	10 A
3000 VA	30 A	20 A	16 A

## Product safety

- The UPS connection instructions and operations described in the manual must be followed in the indicated order.
- **Important:** To reduce the risk of fire, the unit connects only to a circuit provided with branch circuit overcurrent protection as described in this manual, in accordance with the National Electric Code, ANSI/NFPA 70.

The upstream circuit breaker for Normal AC and Bypass AC must be easily accessible. The unit can be disconnected from AC power source by opening this circuit breaker. This circuit breaker is used for backfeed protection and must comply with IEC/EN 62040-1 (the creepage and clearance distances shall meet the basic insulation requirements for pollution degree 2).

- Disconnection and overcurrent protection devices shall be provided by others for permanently connected AC input (Normal AC and Bypass AC) and AC output circuits.
- Check that the indications on the rating plate correspond to your AC powered system and to the actual electrical consumption of all the equipment to be connected to the system.
- For PLUGGABLE EQUIPMENT, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Never install the system near liquids or in an excessively damp environment.
- Never let a foreign body penetrate inside the system.
- Never block the ventilation grates of the system.
- Never expose the system to direct sunlight or source of heat.
- If the system must be stored prior to installation, storage must be in a dry place.
- The admissible storage temperature range is -15°C to +50°C.
- This unit is not designed to conform to ANSI/NFPA 75 and therefore is not for use in ANSI/NFPA 75-certified data centers.
- Although the UPS does not contain anti-backfeed (ABF) relays, some backfeed protection is provided. For example, if some components are damaged in battery mode, the output voltage may feed back to the input. In this case, a current transformer (CT) is used to detect the bypass current feedback voltage. If a current backfeed fault condition is detected, the UPS will terminate the inverter output to avoid personal injury.

---

## Chapter 1. Introduction

Thank you for selecting a Lenovo product to protect your electrical equipment.

Read this manual to take full advantage of the features of your equipment.

Before installing your equipment, read the safety instructions. Then, follow the instructions in this manual for setting up and using the product.

To discover the entire range of Lenovo products and the options available for the Lenovo UPS device, we invite you to visit our website or contact your Lenovo representative.

---

### Notices and statements

The caution and danger statements in this document are also in the multilingual *Safety Information* document, which is on the Lenovo Web site at <https://support.lenovo.com/documents/LNVO-DOCS>. Each statement is numbered for reference to the corresponding statement in the *Safety Information* document.

#### Notices and statements in this document

The following notices and statements are used in this document:

- **Note:** These notices provide important tips, guidance, or advice.
- **Important:** These notices provide information or advice that might help you avoid inconvenient or problem situations.
- **Attention:** These notices indicate possible damage to programs, devices, or data. An attention notice is placed just before the instruction or situation in which damage might occur.
- **Caution:** These statements indicate situations that can be potentially hazardous to you. A caution statement is placed just before the description of a potentially hazardous procedure step or situation.
- **Danger:** These statements indicate situations that can be potentially lethal or hazardous to you. A danger statement is placed just before the description of a potentially lethal or hazardous procedure step or situation.

---

### Environmental protection

Lenovo has implemented an environmental-protection policy. Products are developed according to an eco-design approach.

#### Substances

This product does not contain CFCs, HCFCs or asbestos.

#### Packing

To improve waste treatment and facilitate recycling, separate the various packing components.

- The cardboard we use comprises over 50% of recycled cardboard.
- Sacks and bags are made of polyethylene.

- Packing materials are recyclable and bear the appropriate identification symbol .

Materials	Abbreviations	Number in the symbols 
Polyethylene terephthalat	PET	01
High-density polyethylene	HDPE	02
Polyvinyl chloride	PVC	03
Low-density polyethylene	LDPE	04
Polypropylene	PP	05
Polystyrene	PS	06

Follow all local regulations for the disposal of packing materials.

Refer to the *Lenovo Environmental Notices and User's Guide*, provided on the Lenovo Web site at <https://support.lenovo.com/documents/LNVO-DOCS>.

## End of life

Lenovo will process products at the end of their service life in compliance with local regulations. Lenovo works with companies in charge of collecting and eliminating our products at the end of their service life.

## Product

The product is made up of recyclable materials. Dismantling and destruction must take place in compliance with all local regulations concerning waste. At the end of its service life, the product must be transported to a processing center for electrical and electronic waste.

## Battery

The product contains lead-acid batteries that must be processed according to applicable local regulations concerning batteries.

The battery pack can be removed to comply with regulations and in view of correct disposal.

With the Lenovo UPS device, you can eliminate the effects of power disturbances and guard the integrity of your equipment. Providing outstanding performance and reliability, the Lenovo UPS device's unique benefits include:


- True online double-conversion technology with high power density, utility frequency independence, and power generator compatibility.
- Advanced Battery Management (©ABM) technology that uses advanced battery management to increase battery service life, optimize recharge time, and provide a warning before the end of useful battery life.
- Selectable High Efficiency mode of operation.
- Standard communication options: one RS-232 communication port, one USB communication port, and relay output contacts.
- UPS Network Management Card with enhanced communication capabilities.
- Extended runtime with up to four Extended Battery Modules (EBMs) per UPS.
- Firmware that is easily upgradable without a service call.
- Remote On/Off control through Remote On/Off (ROO) and Remote Power Off (RPO) ports.



## Chapter 2. Presentation

### Standard installations

#### Tower models

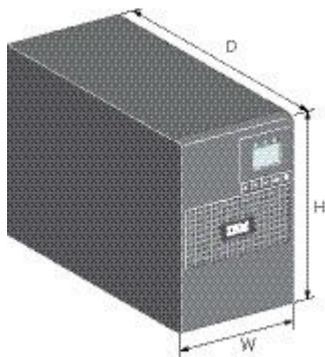

Machine types and models	Weights	Dimensions (inch/mm)
	(lb/kg)	D x W x H
5595-1AX	24.4 / 11.5	13.6 x 5.9 x 9.1 / 345 x 150 x 233
5595-2AX	35.3 / 16.2	17.5 x 5.9 x 9.1 / 445 x 150 x 233
5595-1KX	24.4 / 11.5	13.6 x 5.9 x 9.1 / 345 x 150 x 233
5595-2KX	35.2 / 16.2	17.5 x 5.9 x 9.1 / 445 x 150 x 233

### Rear panels

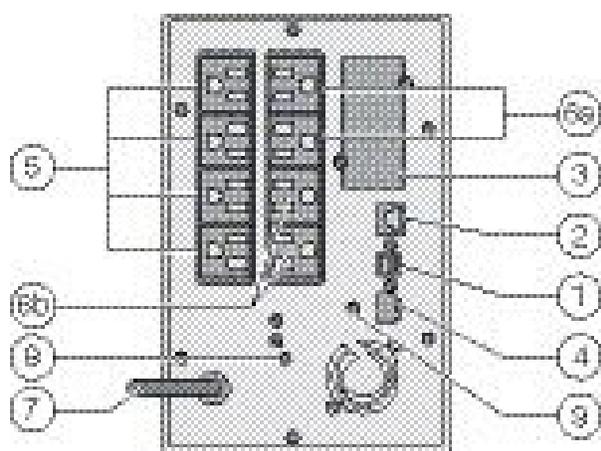


Figure 1. 5595-1AX

- ① USB communication port
- ② RS232 communication port
- ③ Slot where UPS Network Management Card is installed
- ④ Connector for Remote On/Off (ROO) control or Remote Power Off (RPO) control
- ⑤ Outlets for connection of critical equipment (Primary outlet group)
- ⑥a Outlet Group 1: programmable outlets for connection of equipment
- ⑥b Outlet Group 2: programmable outlets for connection of equipment
- ⑦ Attached 6 ft. (1.8m) input power cord for

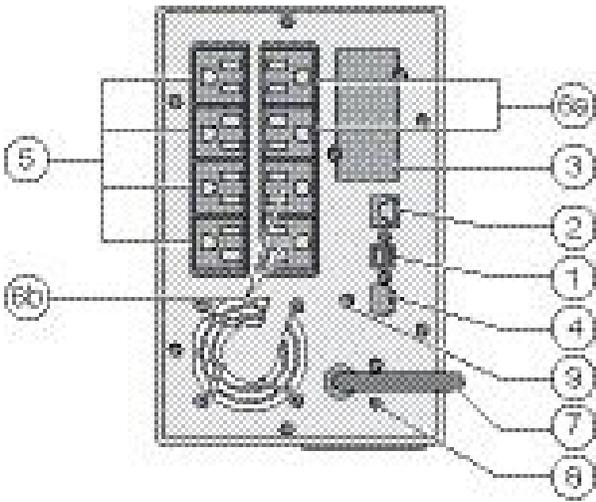


Figure 2. 5595-2AX

AC-power source (5-15P)

- 8 LED indicating site wiring fault (SWF) alarm
- 9 Ground screw

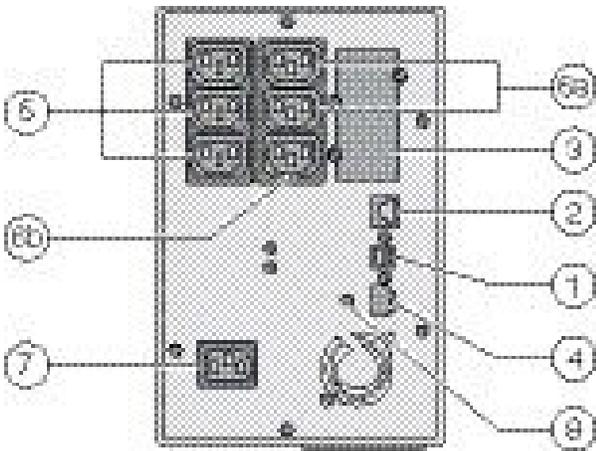


Figure 3. 5595-1KX

- 1 USB communication port
- 2 RS232 communication port
- 3 Slot where UPS Network Management Card is installed
- 4 Connector for Remote On/Off (ROO) control or Remote Power Off (RPO) control
- 5 Outlets for connection of critical equipment (Primary outlet group)
- 6a Outlet Group 1: programmable outlets for connection of equipment
- 6b Outlet Group 2: programmable outlets for connection of equipment
- 7 Socket for connection to AC-power source
- 8 Ground screw


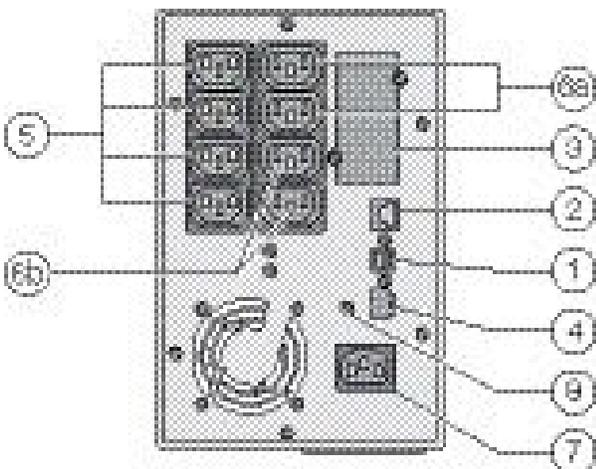


Figure 4. 5595-2KX

## Control panel

The UPS has a five-button graphical LCD. It provides useful information about the UPS itself, load status, events, measurements and settings.

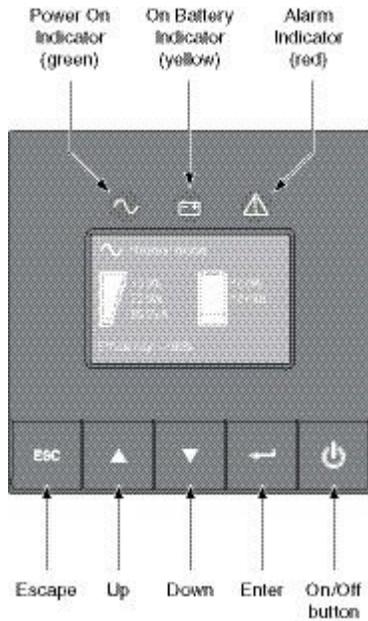


The following table shows the indicator status and description:

Indicator	Status	Description
 Green	On	The UPS is operating normally.
 Yellow	On	The UPS is on Battery mode.
 Red	On	The UPS has an active alarm or fault. See Chapter 7 “Troubleshooting and maintenance” on page 25 for additional information.

## LCD description




After 5 minutes of inactivity, the LCD displays the screen saver.


The LCD backlight automatically dims after 10 minutes of inactivity. Press any button to restore the screen.

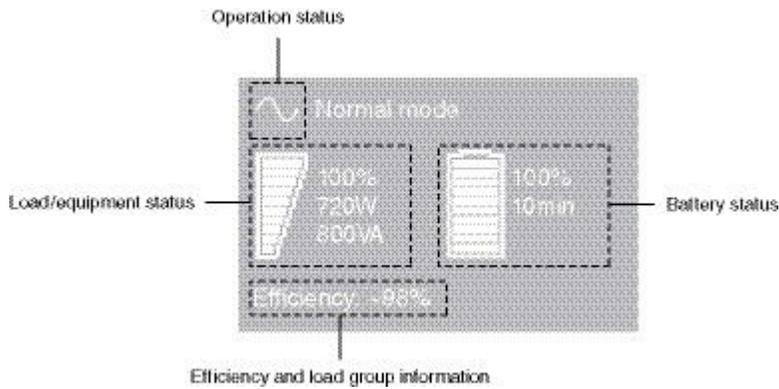

The following table describes the status information provided by the UPS.

**Note:** If an other indicator appears, see Chapter 7 “Troubleshooting and maintenance” on page 25 for additional information.

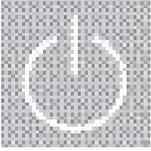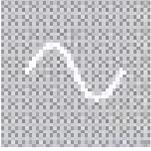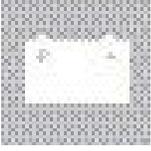Operation status	Cause	Description
Standby mode 	The UPS is OFF, waiting for start-up command from the user.	Equipment is not powered until  button is pressed.
Normal mode 	The UPS is operating normally.	The UPS is powering and protecting the equipment.
In AVR mode  No beep	The UPS is operating normally but the utility voltage is outside normal mode thresholds.	The UPS is powering the equipment through an Automatic Voltage Regulation device.  The equipment is still normally protected.
On Battery  Battery LED is on 1 beep every 10 seconds	A utility failure has occurred and the UPS is in Battery mode.	The UPS is powering the equipment with the battery power. Prepare your equipment for shutdown.
End of backup time	The UPS is on Battery mode and the	This warning is approximate, and the

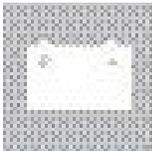Operation status	Cause	Description
 1 beep every 3 seconds	battery packs are running low.	actual time to shut down might vary significantly.  Depending on the UPS load, the "Battery Low" warning might occur before the battery packs reach 20 % capacity.

## Display functions

Press the Enter (↵) button to activate the menu options. Use the two middle buttons (▲ and ▼) to scroll through the menu structure. Press the Enter (↵) button to select an option. Press the ESC button to cancel or return to the previous menu.

Main menu	Submenu	Display information or Menu function
<b>Measurements</b>		Load W VA / Load A pf / Output V Hz / Input V Hz / Battery V min / Efficiency / Power usage
<b>Control</b>	Load Segments	Outlet Group 1: ON / OFF  Outlet Group 2: ON / OFF  These commands overrule user settings for load segments.
	Start battery test	Starts a manual battery test
	Reset fault state	Clears active fault (UPS restart required)
	Restore factory settings	Returns all settings to original values
	Reset power usage	Clears power usage measurements
<b>Settings</b>	Local settings	Sets product general parameters
	Input/output settings	Sets input and output parameters
	On/Off settings	Sets On/Off conditions
	Battery settings	Sets battery configuration
<b>Fault log</b>		Displays event log or alarms
<b>Identification</b>		UPS Type / Part Number / Serial Number / Firmware release / Com. card address

## User settings

The following table displays the options that can be changed by the user.

	Submenu	Available settings	Default settings
<b>Local settings</b>	Language	[ <i>language_name</i> ]  Select the desired language from the list. Menus, status, notices and alarms, UPS fault, Event Log data and settings are in all supported languages.	[English]  User selectable when UPS is powered for the first time.
	LCD settings	Modify LCD screen brightness and contrast to be adapted to room light conditions.	
	Audible alarm	[Enabled] [Disabled on battery] [Always disabled]  Enable or disable the buzzer if an alarm occurs.	[Enabled]
<b>In/Out settings</b>	Output voltage	[100 V][120 V][125 V][200 V][208 V][220 V][230 V][240 V]	User selectable when UPS is powered for the first time.
	Input thresholds	[Normal mode] [Extended mode]  Extended mode reduces lower input voltage to 70 V before UPS transfers to battery power. This can be used if the load can withstand low voltage supply.	[Normal mode]
	Sensitivity	[High] [Low]  High: for sensitive equipment, UPS will easily transfer to battery power when utility conditions are becoming bad.  Low: for equipment that can withstand bad utility conditions, in that case, the UPS will not transfer to battery power.	[High]
<b>In/Out settings (continued)</b>	Load segments - Auto start delay	[No Delay] [1 s] [2 s]...[65354 s]  The connected load is powered after the specified delay.	Outlet Group 1: [3 s]  Outlet Group 2: [6 s]
	Load segments - Auto shutdown delay	[Disabled] [0s] [1 s] [2 s]...[65354 s]  During a power outage, authorizes UPS to turn off power to equipment connected to Outlet Group	Outlet Group 1: [Disabled]  Outlet Group 2: [Disabled]

	Submenu	Available settings	Default settings
		<p>1 and/or Outlet Group 2 outlets.</p> <p>This feature allows the shedding of non-critical loads in order to conserve battery power for critical loads connected to the Primary outlet group.</p>	
	Overload prealarm	<p>[10 %] [15 %] [20 %] ... [100 %] [105 %]</p> <p>Sets critical percentage of load where alarm overload alarm occurs.</p>	[105%]
<b>ON/OFF settings</b>	Cold start	<p>[Enabled] [Disabled]</p> <p>Enables the product to be started on battery power.</p> <p>First cold start is always disabled.</p>	[Enabled]
	Forced reboot	<p>[Enabled] [Disabled]</p> <p>If mains recover during a shutdown sequence:</p> <p>If Enabled, shutdown sequence will complete and wait 10 seconds prior to restart, if set to Disable, shutdown sequence will not complete and restart will occur immediately.</p>	[Enabled]
	Auto restart	<p>[Enabled] [Disabled]</p> <p>Enables the product to restart automatically when mains recovers after a complete battery discharge.</p>	[Enabled]
<b>ON/OFF settings</b> (continued)	Energy saving	<p>[Enabled] [Disabled]</p> <p>If Enabled, UPS will shut down after 5 min. of back-up time, if no load is detected on the output.</p>	[Disabled]
	Sleep mode	<p>[Enabled] [Disabled]</p> <p>If Disabled, LCD and communication will turn OFF immediately after UPS is OFF.</p>	[Disabled]


	Submenu	Available settings	Default settings
		If Enabled, LCD and communication stays ON 1h30 min. after UPS is OFF.	
	Remote command	[Enabled] [Disabled] If Enabled, shutdown or restart commands from software are authorized.	[Enabled]
	RPO delay	[0 s] [1 s ] [2 s]...[180 s] Delays remote power off command	[0 s]
<b>Battery settings</b>	Automatic battery test	[No test] [Every day] [Every week] [Every month] Available only if battery charge mode is set to constant charge.	Every week (in constant charge) otherwise following ABM
	Low battery warning	[1 %] [2 %] ... [100 %] The alarm triggers when the set percentage of battery capacity is reached during a back-up time.	[20%]
	Restart battery level	[1 %] [2 %] ... [100 %] If set, automatic restart will occur only when percentage of battery charge is reached.	[0%]
	Battery charge mode	[ABM cycling] [Constant charge]	[ABM cycling]
	Deep discharge protection	[Yes] [No] If set to Yes, the UPS automatically prevents the battery packs from deep discharge by adapting end of back-up time voltage threshold.	[Yes]

---

## Chapter 3. Installation

---

### Unpacking and contents check

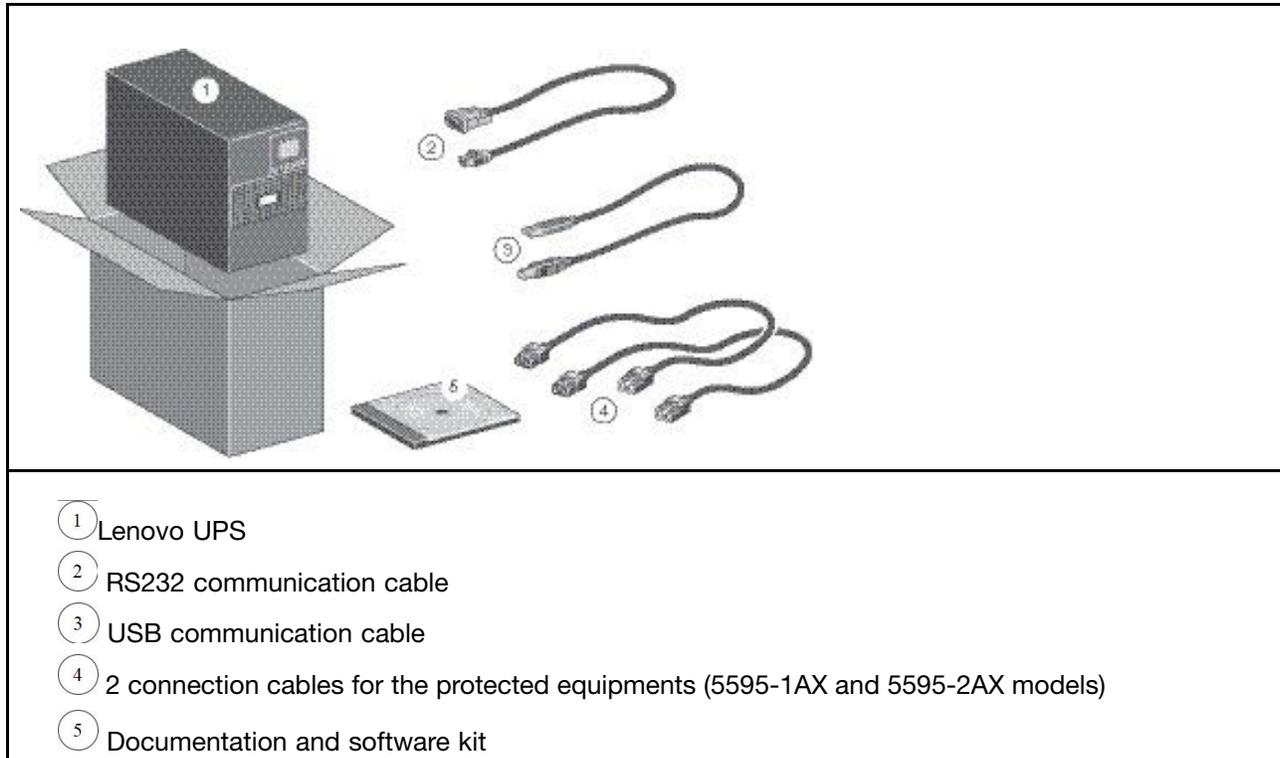


**Note:** Packing materials must be disposed of in compliance with all local regulations concerning waste. Recycling symbols are printed on the packing materials to facilitate sorting.

---

### Battery module connection


**Important:** Before starting the UPS, connect the internal battery pack.

**Note:** A small amount of arcing might occur when connecting the battery pack. This is normal and does not damage the UPS or present any safety concern.

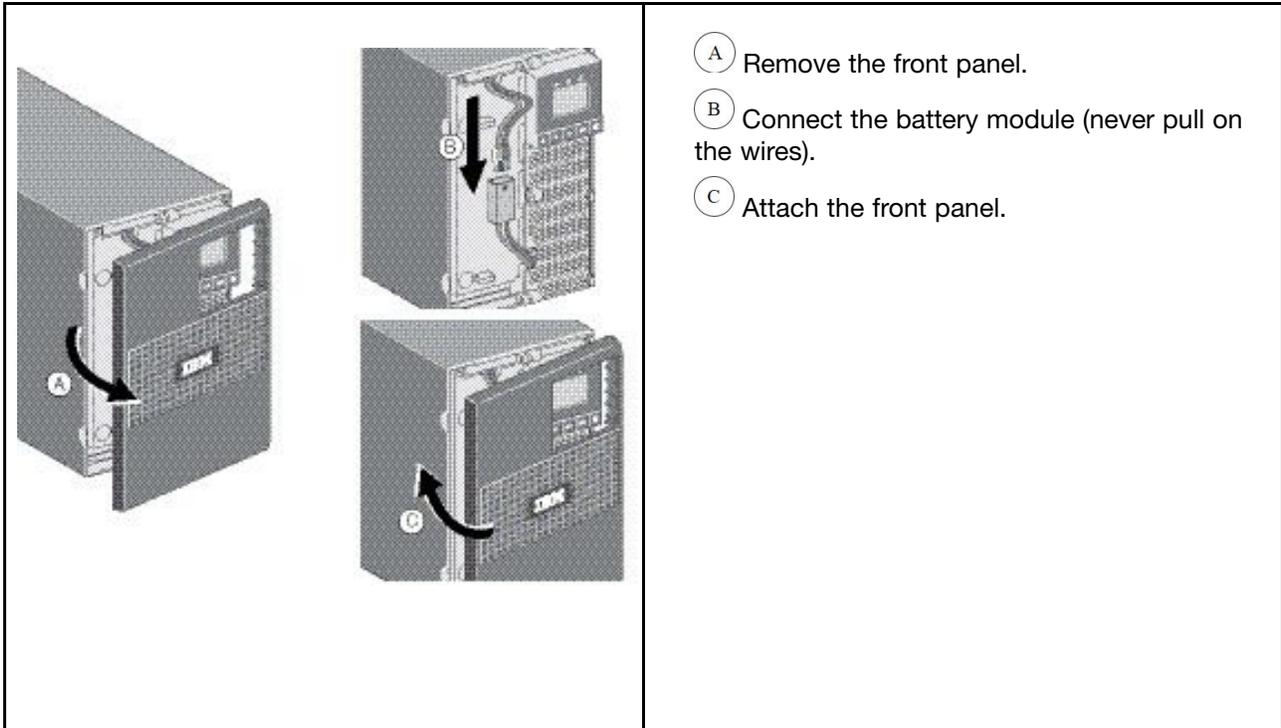

---

## Installation of tower models

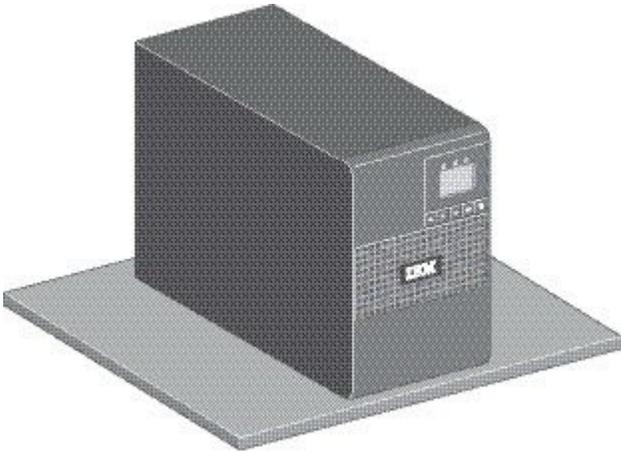


*Figure 5. Setup for tower installation*

---

## Installing the communication card

**Note:** It is not necessary to shut down the UPS before installing the UPS Network Management Card.

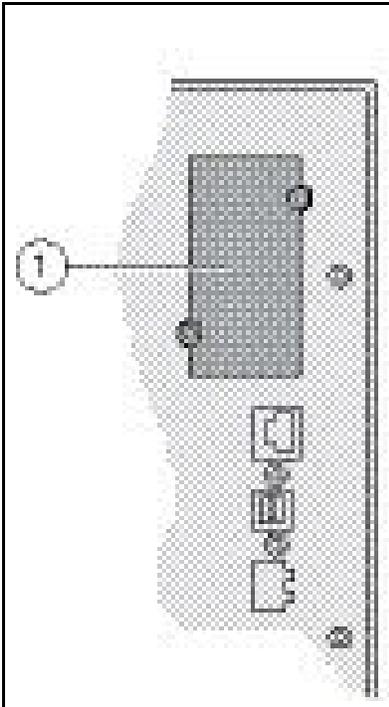


1. Remove the connector panel blank (1), which is secured by two screws.
2. Insert the UPS Network Management Card into the slot.
3. Secure the panel by tightening the two screws.



## Chapter 4. Communication

### Communication ports

#### Characteristics of the optocouplers communication port

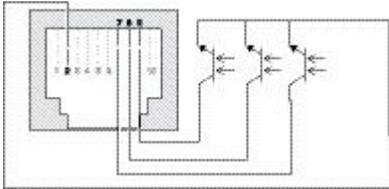	<p>Pins 1, 3, 4, 5, 6, 10: not used</p> <p>Pin 2: common</p> <p>Pin 7: low battery</p> <p>Pin 8: operation on battery power</p> <p>Pin 9: UPS ON, equipment supplied</p> <p>n.o.: normally open contact</p>
---	---


When a signal is activated, the contact is closed between the common (pin 2) and the pin for the corresponding signal.

Contact characteristics (optocoupler):

- Voltage: 48 V DC max
- Current: 25 mA max
- Power: 1.2 W

#### Connecting the RS232 or USB communication port


**Note:** The RS232 and USB communication ports cannot operate simultaneously.

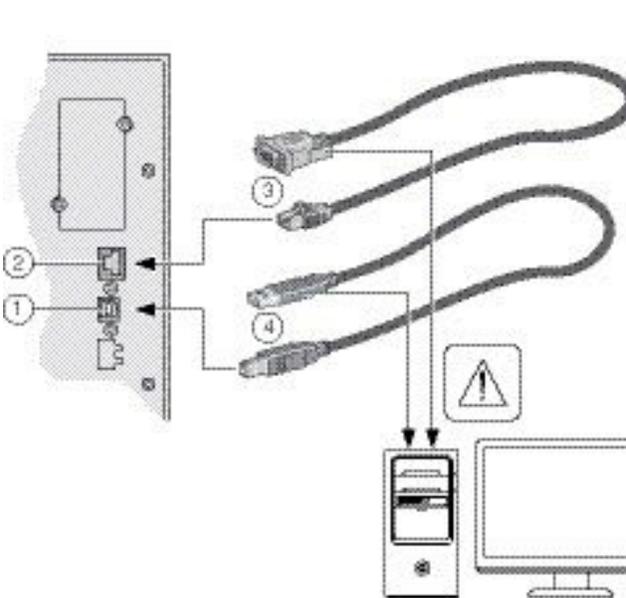	<ol style="list-style-type: none"><li>1. Connect the RS232 (3) or USB (4) communication cable to the serial or USB port on the computer equipment.</li><li>2. Connect the other end of the communication cable to the USB (1) or RS232 (2) communication port on the UPS.</li></ol> <p><b>The UPS can now communicate with Lenovo power management software.</b></p>
---	--

---

## Replacing the communication card

Follow these steps to replace the UPS Network Management Card.

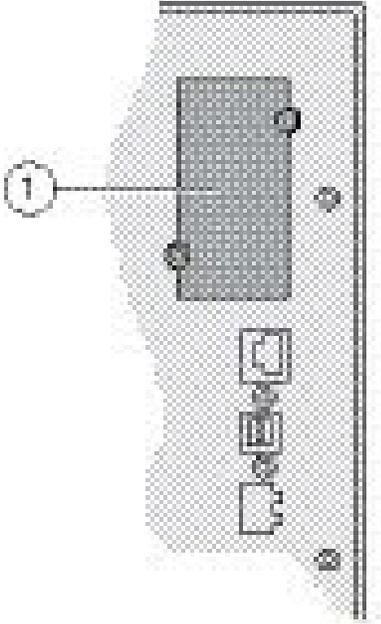

1. Turn off the UPS.
2. Disconnect the network cable.
3. Remove the connector panel blank (1), which is secured by two screws.
4. Insert the UPS Network Management Card into the slot.
5. Secure the panel by tightening the two screws.

---

## Chapter 5. Operation

---

### UPS startup and shutdown

#### Startup and Normal operation

To start the UPS:

- Step 1. Verify that the UPS power cord is plugged in.
- Step 2. The UPS front panel display illuminates and shows the Lenovo logo.
- Step 3. Verify that the UPS status screen shows .
- Step 4. Press the  button on the UPS front panel for at least 3 seconds.

The UPS front panel display changes status to "UPS starting...".

- Step 5. Check the UPS front panel display for active alarms or notices. Resolve any active alarms before continuing. See the Troubleshooting section.

If the  indicator is on, do not proceed until all alarms are clear. Check the UPS status from the front panel to view the active alarms. Correct the alarms and restart if necessary.

- Step 6. Verify that the  indicator illuminates solid, indicating that the UPS is operating normally and any loads are powered and protected.

The UPS should be in Normal mode.

#### Starting the UPS on battery power

**Note:** Before using this feature, the UPS must have been powered by utility power with output enabled at least once. Battery start can be disabled. See "Cold start" on page 11.

To start the UPS on battery power:

- Step 1. Press the power () button on the UPS front panel until the UPS front panel display illuminates and shows a status of "UPS starting...".

The UPS cycles through Standby mode to Battery mode. The  indicator illuminates solid. The UPS supplies power to your equipment using batteries.

- Step 2. Check the front panel display for active alarms or notices besides the "Battery mode" notice and notices that indicate missing utility power. Resolve any active alarms before continuing. See the Troubleshooting section.
- Step 3. Check the UPS status from the front panel to view the active alarms. Correct the alarms and restart if necessary.

## Shutting down the UPS

To shut down the UPS:

Step 1. Press the  button on the UPS front panel for three seconds.

The UPS starts to beep and shows a status of "UPS shutting OFF...". The UPS then transfers to Standby mode, and the  indicator turns off.

---

## Operation on battery power

### Transfer to battery power

- The connected devices continue to be supplied by the UPS when AC input power is no longer available. The necessary energy is provided by the battery packs.
- The  and  indicator illuminates solid.
- The audio alarm beeps every ten seconds.

**Note:** The connected devices are supplied by the battery pack.

### Low-battery warning

- The  and  indicator illuminates solid.
- The audio alarm beeps every three seconds.

**Note:** The remaining battery power is low. Shut down all applications on the connected equipment because automatic UPS shutdown is imminent.

### End of battery backup time

- LCD displays "End of backup time".
- All the LEDs go OFF.
- The audio alarm stops.
- The UPS shuts down.

---

## Return of AC input power

Following an outage, the UPS restarts automatically when AC input power returns (unless the restart function has been disabled) and the load is supplied again.

---


## UPS remote control functions

The Lenovo UPS offers a choice between two remote control functions.

**Remote Power Off (RPO):** allows a remote contact to be used to disconnect all the equipment connected to the UPS. Restarting the UPS requires manual intervention.



**Remote ON/OFF (ROO):** allows remote action of the  button to shut down the UPS.

These functions are obtained by opening a contact connected between the appropriate pins of connector  on the rear panel of the UPS (see the figures in "Remote control connection and test" on page 21).

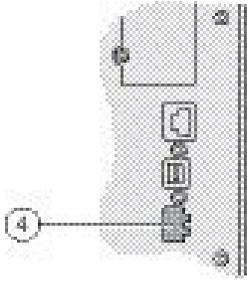

## Remote control connection and test

- Step 1. Check that the UPS is OFF and disconnected from the AC input source.
- Step 2. Remove connector .
- Step 3. Connect a normally closed volt-free contact (60 V DC / 30 V AC max., 20 mA max., 0.75 mm<sup>2</sup> (18 AWG) cable cross-section) between the two pins of connector  (see diagram).

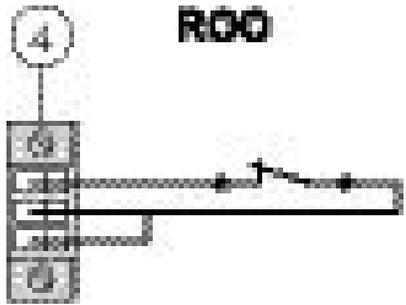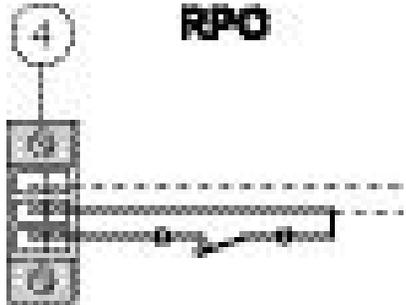 <p><b>RCO</b></p>	<p>Contact open: UPS shutdown</p> <p>Contact closed: UPS start-up (UPS connected to AC power and AC power is available)</p> <p><b>Note:</b> The local ON/OFF control using the  button overrides the remote-control function.</p>
 <p><b>RPO</b></p>	<p>Contact open: UPS shutdown, LED  goes ON.</p> <p>To return to normal operation, deactivate the remote external contact and restart the UPS by pressing the  button.</p>

- Step 4. Plug connector  into the back of the UPS.
- Step 5. Connect and restart the UPS following the previously described procedures.
- Step 6. Activate the external remote shutdown contact to test the function. This connector must be connected only to Safety Extra-Low Voltage (SELV) circuits.

## Operating modes: summary

The following table summarizes the characteristics of your UPS unit in each operating mode.

Table 1. Operating modes

Mode	Online	Battery	Standby	High Efficiency*
Load	powered	powered	no power	powered
Batteries	charging	discharging	charging	charging
<b>Protection features:</b>				
Power failure	yes	n/a	no	yes
Power sag	yes	n/a	no	yes
Power surge	yes	n/a	no	yes
Under voltage	yes	n/a	no	yes
Over voltage	yes	n/a	no	yes

**Note:** (\*) High Efficiency mode introduces a delay between loss of input power and switching to battery power.

---

## Chapter 6. UPS maintenance

---

### Battery pack replacement

When the battery replacement screen is displayed (see illustration), replace the battery packs. Contact your service representative to order new battery packs.



Replace all battery packs in the UPS and any EBMs connected to the UPS at the same time. The replacement battery packs must have no more than 12 month variation between their dates of manufacture and should not have reached or exceeded their shelf life. Dispose of battery packs in accordance with local regulations.

Battery packs can be replaced without turning off the UPS or disconnecting the load. If you prefer to power down to change the battery packs, see *Shutting down the UPS*.

**Note:** DO NOT DISCONNECT a battery pack while the UPS is in Battery mode. Be aware that the UPS can switch to Battery mode at any time and without warning.


### Safety considerations

The battery packs can cause electrocution and high short-circuit currents. The following safety precautions are required before servicing the battery components:


- Remove watches, rings, bracelets and all other metal objects from the hands and arms
- Use tools with an insulated handle

### Removing the battery tray on tower models


This operation must be performed when the UPS is switched OFF.

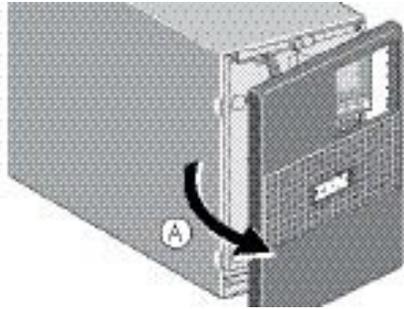


(A) Remove the front panel.

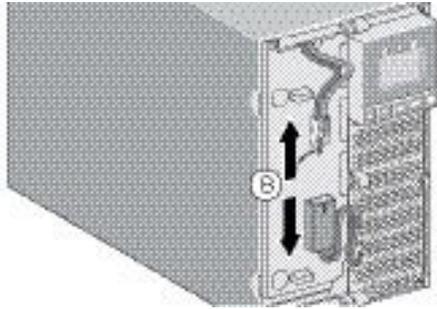

(B) Disconnect the battery-module by separating the town connectors (never pull on the wires).

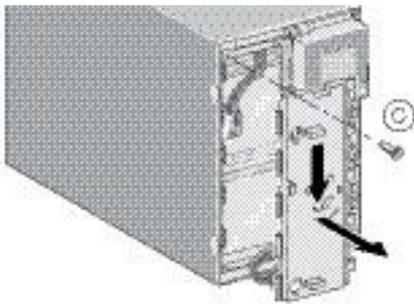

(C) Remove the plastic protection cover in front of the battery (one screw).

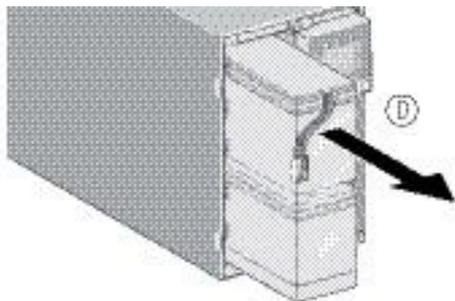

(D) Pull the plastic tab to remove the battery block and replace it.

## Mounting the new battery pack

Step 1. Carry out the instructions in “Removing the battery tray on tower models” on page 23 in reverse order.

**Note:** To ensure safety and high performance, use only battery packs supplied by Lenovo.

**Important:** Take care to firmly press together the two parts of the connector during remounting.






## Chapter 7. Troubleshooting and maintenance

### Alarms and faults

To check the Event log or Fault log:

1. Press any button on the front panel display to activate the menu options.
2. Press the  button to select Event log or Fault log.
3. Press Enter () to review the selected log.
4. Scroll through the listed events or faults.

The following table describes conditions that are logged.

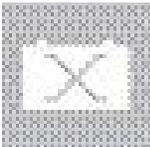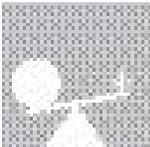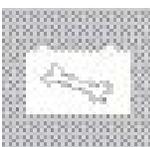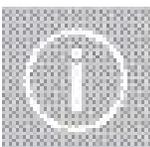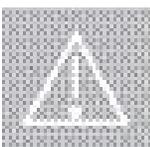Conditions	Possible cause	Action
Batteries disconnected 	The UPS does not recognize the internal battery packs.	If the condition persists, contact your service representative.
	The battery packs are not connected.	Verify that all battery packs are connected properly. If the condition persists, contact your service representative.
Overload 	Power requirement exceeds the UPS capacity (greater than 105 % of nominal).	Remove some of the equipment from the UPS. The UPS continues to operate, but it might shut down if the load increases. The alarm resets when the condition becomes inactive.
End of battery life 	The battery has reached end-of-life.	Contact your service representative for battery-pack replacement.
Event 	A UPS event occurs.  Example: During remote Power off, the RPO contact has been activated to shut down the UPS and now prevents restart.	Set the contact back to its normal position and press the power (  ) button to restart.
UPS fault 	An internal failure occurred.	Record the alarm message and the UPS serial number, then contact your service representative.

---

## Service and support

If you have any questions or problems with the UPS, call your Local Distributor or your local service representative and ask for a UPS technical representative.

Have the following information ready when you call for service:

- Equipment type and model number
- Serial number
- Firmware version number
- Date of failure or problem
- Symptoms of failure or problem
- Customer address and contact information

If repair is required, you will be given a Returned Material Authorization (RMA) number. This number must appear on the outside of the package and on the Bill Of Lading (if applicable). Use the original packaging or request packaging from your local service representative or distributor. Units damaged in shipment as a result of improper packaging are not covered under warranty. A replacement or repair unit will be shipped, freight prepaid for all warrantied units.

**Note:** For critical applications, immediate replacement might be available. Call your local service representative or the distributor nearest you.

## Chapter 8. Parts listing

The following replaceable components are available for the product.

For an updated parts listing on the web, go to <http://www.lenovo.com/support>.

Replaceable components consist of consumable parts, structural parts, and customer replaceable units (CRUs):

- **Consumable parts:** Purchase and replacement of consumable parts (components such as printer cartridges, that have depletable life) is your responsibility. If Lenovo acquires or installs a consumable part at your request, you will be charged for the installation.
- **Structural parts:** Purchase and replacement of structural parts (components such as the top cover) is your responsibility. If Lenovo acquires or installs a structural part at your request, you will be charged for the installation.
- **Tier 1 customer replaceable unit (CRU):** Replacement of Tier 1 CRUs is your responsibility. If Lenovo installs a Tier 1 CRU at your request without a service contract, you will be charged for the installation.
- **Tier 2 customer replaceable unit:** You may install a Tier 2 CRU yourself or request Lenovo to install it, at no additional charge, under the type of warranty service that is designated for your compute node.

For information about the terms of the warranty and getting service and assistance, see the *Warranty Information* document.


Table 2. Parts listing table: Tower models

The parts listing table is a four-column table that lists customer replaceable units (CRUs) for the product. Column 1 lists the index number of the CRU in the parts listing illustration. Column 2 contains the CRU description. Columns 3 and 4 identify the CRU part number.

Description	Type	Part No.	5595-1AX	5595-1KX	5595-2AX	5595-2KX
Eaton 5P1000 120V Tower	Tier 1 CRU	00FP737	x			
Eaton 5P1150i 230V Tower	Tier 1 CRU	00FP738		x		
Eaton 5P1500 120V Tower	Tier 1 CRU	00FP739			x	
Eaton 5P1550i 208V Tower	Tier 1 CRU	00FP741				x
5P1000, 5P1150i Battery Spare	Tier 1 CRU	00FP786	x	x		
5P1500, 5P1550g Battery Spare	Tier 1 CRU	00FP787			x	x
5P Tower Bezel & Logos Spare	Tier 1 CRU	00FP788	x	x	x	x
Power Cord Part -- 5P P.C YH AWG18*3 10A 250V C14C13 VDE 1.2M	Tier 1 CRU	00FP821		x		x



## Appendix A. Technical specifications

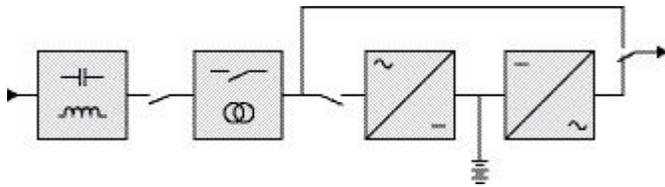


	5595-1AX	5595-2AX
<b>Output Power @ 120 V</b>	1000 VA	1440 VA
	770 W	1100 W
<b>Output Power Capacity @ 125 V</b>	1000 VA	1440 VA
	770 W	1100 W
<b>Output Power @ 100 V</b>	833 VA	1080 VA
	641 W	825 W
<b>AC Input power</b>	100-125VAC,50/60Hz,1ph,8.8A max	100-125VAC,50/60Hz,1ph,12A max
<b>AC Output power</b>	50/60Hz,1ph; 100VAC,833VA,641W,8.4A; 120VAC,1000VA,770W,8.4A; 125VAC,1000VA,770W,8.4A	50/60Hz,1ph; 100VAC,1080VA,825W,10.8A; 120VAC,1440VA,1100W,12A; 125VAC,1440VA,1100W,12A
<b>Output on battery power</b>	100/120 V (-10/+6 %) <sup>(1)</sup>	
<ul style="list-style-type: none"> <li>Voltage</li> <li>Frequency</li> </ul>	50/60 Hz ±0.1 Hz	
<b>Battery (sealed lead acid, maintenance free)</b>	2 x 12 V	3 x 12V
<ul style="list-style-type: none"> <li>Standard</li> </ul>	9 Ah	9 Ah
<b>Environment</b>	Operating temperature: 0 to +35 °C (32 to 95 °F)	Operating temperature: 0 to +40 °C (32 to 104 °F)
	Storage temperature: -15 to +50 °C (5 to 122 °F)	
	Relative humidity: 0 to 90 % (without condensation)	
	Noise level: < 40 dBA	

(1)Adjustable to 100/120/125 V, must be set to the identical AC power source value.

**Important:** To reduce the risk of fire, the unit connects only to a circuit provided with branch circuit overcurrent protection as described in this manual, in accordance with the National Electric Code, ANSI/NFPA 70.

This product is designed for IT power distribution systems.

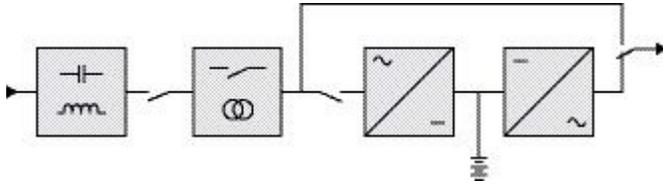

	5595-1KX	5595-2KX
<b>Output Power @ 230 V</b>	1150 VA	1550 VA
	770 W	1100 W
<b>Output Power Capacity @ 208 V</b>	1035 VA	1395 VA
	693 W	990 W
<b>Output Power @ 200 V</b>	1035 VA	1395 VA
	693 W	990 W
<b>AC Input power</b>	200-240VAC,50/60Hz,1ph,5.3A max	200-240VAC,50/60Hz,1ph,7.1A max
<b>AC Output power</b>	50/60Hz,1ph; 200VAC,1035VA,693W,5.2A; 208VAC,1035VA,693W,5.2A; 220VAC,1150VA,770W,5.3A; 230VAC,1150VA,770W,5.3A; 240VAC,1150VA,770W,5.3A	50/60Hz,1ph; 200VAC,1395VA,990W,7A; 208VAC,1395VA,990W,7A; 220VAC,1550VA,1100W,7.1A; 230VAC,1550VA,1100W,7.1A; 240VAC,1550VA,1100W,7.1A
<b>Output on battery power</b>	200/208/220/230/240 V (-10/+6 %) <sup>(1)</sup>	
<ul style="list-style-type: none"> <li>Voltage</li> <li>Frequency</li> </ul>	50/60 Hz ±0.1 Hz	
<b>Battery (sealed lead acid, maintenance free)</b>	Tower	
	2 x 12 V	3 x 12V
<ul style="list-style-type: none"> <li>Standard</li> </ul>	9 Ah	9 Ah
<b>Environment</b>	0 to +35 °C	0 to +40 °C
	-15 to +50 °C	
	20 to 90 % (without condensation)	
	< 40 dBA	

(1)Adjustable to 200/208/220/230/240 V, must be set to the identical AC power source value.

When the appliance is used in the EU, use an external circuit breaker in front of line with rating 16 A, 250 V which is IEC/EN 60898-1 standard compliant.

When the appliance is used in American area, use an external circuit breaker in front of line with rating 20 A, 250 V.

This product is designed for IT power distribution systems.

---

## Appendix B. Getting help and technical assistance

If you need help, service, or technical assistance or just want more information about Lenovo products, you will find a wide variety of sources available from Lenovo to assist you.

Use this information to obtain additional information about Lenovo and Lenovo products, and determine what to do if you experience a problem with your Lenovo system or optional device.

**Note:** This section includes references to IBM web sites and information about obtaining service. IBM is Lenovo's preferred service provider for the System x, Flex System, and NeXtScale System products.

---

### Before you call

Before you call, make sure that you have taken these steps to try to solve the problem yourself.

If you believe that you require warranty service for your Lenovo product, the service technicians will be able to assist you more efficiently if you prepare before you call.

- Check all cables to make sure that they are connected.
- Check the power switches to make sure that the system and any optional devices are turned on.
- Check for updated software, firmware, and operating-system device drivers for your Lenovo product. The Lenovo Warranty terms and conditions state that you, the owner of the Lenovo product, are responsible for maintaining and updating all software and firmware for the product (unless it is covered by an additional maintenance contract). Your service technician will request that you upgrade your software and firmware if the problem has a documented solution within a software upgrade.
- If you have installed new hardware or software in your environment, check <http://www.lenovo.com/serverproven/> to make sure that the hardware and software is supported by your product.
- Go to <http://www.lenovo.com/support> to check for information to help you solve the problem.
- Gather the following information to provide to the service technician. This data will help the service technician quickly provide a solution to your problem and ensure that you receive the level of service for which you might have contracted.
  - Hardware and Software Maintenance agreement contract numbers, if applicable
  - Machine type number (Lenovo 4-digit machine identifier)
  - Model number
  - Serial number
  - Current system UEFI and firmware levels
  - Other pertinent information such as error messages and logs
- Go to [http://www.ibm.com/support/entry/portal/Open\\_service\\_request](http://www.ibm.com/support/entry/portal/Open_service_request) to submit an Electronic Service Request. Submitting an Electronic Service Request will start the process of determining a solution to your problem by making the pertinent information available to the service technicians. The IBM service technicians can start working on your solution as soon as you have completed and submitted an Electronic Service Request.

You can solve many problems without outside assistance by following the troubleshooting procedures that Lenovo provides in the online help or in the Lenovo product documentation. The Lenovo product documentation also describes the diagnostic tests that you can perform. The documentation for most systems, operating systems, and programs contains troubleshooting procedures and explanations of error messages and error codes. If you suspect a software problem, see the documentation for the operating system or program.

---

## Using the documentation

Information about your Lenovo system and preinstalled software, if any, or optional device is available in the product documentation. That documentation can include printed documents, online documents, readme files, and help files.

See the troubleshooting information in your system documentation for instructions for using the diagnostic programs. The troubleshooting information or the diagnostic programs might tell you that you need additional or updated device drivers or other software. Lenovo maintains pages on the World Wide Web where you can get the latest technical information and download device drivers and updates. To access these pages, go to <http://www.lenovo.com/support>.

---

## Getting help and information from the World Wide Web

Up-to-date information about Lenovo products and support is available on the World Wide Web.

On the World Wide Web, up-to-date information about Lenovo systems, optional devices, services, and support is available at <http://www.lenovo.com/support>. The most current version of the product documentation is available in the following product-specific Information Centers:

- **Flex System products:**  
<http://pic.dhe.ibm.com/infocenter/flexsys/information/index.jsp>
- **System x products:**  
<http://publib.boulder.ibm.com/infocenter/systemx/documentation/index.jsp>
- **NeXtScale System products:**  
<http://pic.dhe.ibm.com/infocenter/nxtscale/documentation/index.jsp>

---

## How to send DSA data

You can use the Enhanced Customer Data Repository to send diagnostic data to IBM.

Before you send diagnostic data to IBM, read the terms of use at <http://www.ibm.com/de/support/ecurep/terms.html>.

You can use any of the following methods to send diagnostic data:

- **Standard upload:**  
[http://www.ibm.com/de/support/ecurep/send\\_http.html](http://www.ibm.com/de/support/ecurep/send_http.html)
- **Standard upload with the system serial number:**  
[http://www.ecurep.ibm.com/app/upload\\_hw](http://www.ecurep.ibm.com/app/upload_hw)
- **Secure upload:**  
[http://www.ibm.com/de/support/ecurep/send\\_http.html#secure](http://www.ibm.com/de/support/ecurep/send_http.html#secure)
- **Secure upload with the system serial number:**  
[https://www.ecurep.ibm.com/app/upload\\_hw](https://www.ecurep.ibm.com/app/upload_hw)

---

## Creating a personalized support web page

You can create a personalized support web page by identifying Lenovo products that are of interest to you.

To create a personalized support web page, go to <http://www.ibm.com/support/mynotifications>. From this personalized page, you can subscribe to weekly email notifications about new technical documents, search for information and downloads, and access various administrative services.

---

## Software service and support

Through IBM Support Line, you can get telephone assistance, for a fee, with usage, configuration, and software problems with your Lenovo products.

For more information about Support Line and other IBM services, see <http://www.ibm.com/services> or see <http://www.ibm.com/planetwide> for support telephone numbers. In the U.S. and Canada, call 1-800-IBM-SERV (1-800-426-7378).

---

## Hardware service and support

IBM is Lenovo's preferred service provider for the System x, Flex System and NeXtScale System products.

You can receive hardware service through your Lenovo reseller or from IBM. To locate a reseller authorized by Lenovo to provide warranty service, go to <http://www.ibm.com/partnerworld> and click **Business Partner Locator**. For IBM support telephone numbers, see <http://www.ibm.com/planetwide>. In the U.S. and Canada, call 1-800-IBM-SERV (1-800-426-7378).

In the U.S. and Canada, hardware service and support is available 24 hours a day, 7 days a week. In the U.K., these services are available Monday through Friday, from 9 a.m. to 6 p.m.

---

## Taiwan product service

Use this information to contact product service for Taiwan.

委製商/進口商名稱: 荷蘭商聯想股份有限公司台灣分公司  
進口商地址: 台北市內湖區堤頂大道2段89號5樓  
進口商電話: 0800-000-702 (代表號)



---

## Appendix C. Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area.

Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

*Lenovo (United States), Inc.  
1009 Think Place - Building One  
Morrisville, NC 27560  
U.S.A.  
Attention: Lenovo Director of Licensing*

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

---

## Trademarks

Lenovo, the Lenovo logo, Flex System, System x, NeXtScale System, and x Architecture are trademarks of Lenovo in the United States, other countries, or both.

Intel and Intel Xeon are trademarks of Intel Corporation in the United States, other countries, or both.

Internet Explorer, Microsoft, and Windows are trademarks of the Microsoft group of companies.

Linux is a registered trademark of Linus Torvalds.

Other company, product, or service names may be trademarks or service marks of others.

---

## Important notes

Processor speed indicates the internal clock speed of the microprocessor; other factors also affect application performance.

CD or DVD drive speed is the variable read rate. Actual speeds vary and are often less than the possible maximum.

When referring to processor storage, real and virtual storage, or channel volume, KB stands for 1 024 bytes, MB stands for 1 048 576 bytes, and GB stands for 1 073 741 824 bytes.

When referring to hard disk drive capacity or communications volume, MB stands for 1 000 000 bytes, and GB stands for 1 000 000 000 bytes. Total user-accessible capacity can vary depending on operating environments.

Maximum internal hard disk drive capacities assume the replacement of any standard hard disk drives and population of all hard-disk-drive bays with the largest currently supported drives that are available from Lenovo.

Maximum memory might require replacement of the standard memory with an optional memory module.

Each solid-state memory cell has an intrinsic, finite number of write cycles that the cell can incur. Therefore, a solid-state device has a maximum number of write cycles that it can be subjected to, expressed as total bytes written (TBW). A device that has exceeded this limit might fail to respond to system-generated commands or might be incapable of being written to. Lenovo is not responsible for replacement of a device that has exceeded its maximum guaranteed number of program/erase cycles, as documented in the Official Published Specifications for the device.

Lenovo makes no representations or warranties with respect to non-Lenovo products. Support (if any) for the non-Lenovo products is provided by the third party, not Lenovo.

Some software might differ from its retail version (if available) and might not include user manuals or all program functionality.

---

## Recycling information

Lenovo encourages owners of information technology (IT) equipment to responsibly recycle their equipment when it is no longer needed. Lenovo offers a variety of programs and services to assist equipment owners in recycling their IT products. For information on recycling Lenovo products, go to: <http://www.lenovo.com/recycling>.

---

## Particulate contamination

**Attention:** Airborne particulates (including metal flakes or particles) and reactive gases acting alone or in combination with other environmental factors such as humidity or temperature might pose a risk to the device that is described in this document.

Risks that are posed by the presence of excessive particulate levels or concentrations of harmful gases include damage that might cause the device to malfunction or cease functioning altogether. This specification sets forth limits for particulates and gases that are intended to avoid such damage. The limits must not be viewed or used as definitive limits, because numerous other factors, such as temperature or moisture content of the air, can influence the impact of particulates or environmental corrosives and gaseous contaminant transfer. In the absence of specific limits that are set forth in this document, you must implement practices that maintain particulate and gas levels that are consistent with the protection of human health and safety. If Lenovo determines that the levels of particulates or gases in your environment have caused damage to the device, Lenovo may condition provision of repair or replacement of devices or parts on implementation of appropriate remedial measures to mitigate such environmental contamination. Implementation of such remedial measures is a customer responsibility.

Table 3. Limits for particulates and gases

Contaminant	Limits
Particulate	<ul style="list-style-type: none"><li>The room air must be continuously filtered with 40% atmospheric dust spot efficiency (MERV 9) according to ASHRAE Standard 52.2<sup>1</sup>.</li><li>Air that enters a data center must be filtered to 99.97% efficiency or greater, using high-efficiency particulate air (HEPA) filters that meet MIL-STD-282.</li><li>The deliquescent relative humidity of the particulate contamination must be more than 60%<sup>2</sup>.</li><li>The room must be free of conductive contamination such as zinc whiskers.</li></ul>
Gaseous	<ul style="list-style-type: none"><li>Copper: Class G1 as per ANSI/ISA 71.04-1985<sup>3</sup></li><li>Silver: Corrosion rate of less than 300 Å in 30 days</li></ul>

<sup>1</sup> ASHRAE 52.2-2008 - *Method of Testing General Ventilation Air-Cleaning Devices for Removal Efficiency by Particle Size*. Atlanta: American Society of Heating, Refrigerating and Air-Conditioning Engineers, Inc.

<sup>2</sup> The deliquescent relative humidity of particulate contamination is the relative humidity at which the dust absorbs enough water to become wet and promote ionic conduction.

<sup>3</sup> ANSI/ISA-71.04-1985. *Environmental conditions for process measurement and control systems: Airborne contaminants*. Instrument Society of America, Research Triangle Park, North Carolina, U.S.A.

---

## Telecommunication regulatory statement

This product may not be certified in your country for connection by any means whatsoever to interfaces of public telecommunications networks. Further certification may be required by law prior to making any such connection. Contact a Lenovo representative or reseller for any questions.

---

## Electronic emission notices

When you attach a monitor to the equipment, you must use the designated monitor cable and any interference suppression devices that are supplied with the monitor.

---

## Federal Communications Commission (FCC) statement

**Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment

generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Lenovo is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that might cause undesired operation.

## **Industry Canada Class A emission compliance statement**

This Class A digital apparatus complies with Canadian ICES-003.

## **Avis de conformité à la réglementation d'Industrie Canada**

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

## **Australia and New Zealand Class A statement**

**Attention:** This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## **European Union EMC Directive conformance statement**

This product is in conformity with the protection requirements of EU Council Directive 2014/30/EU on the approximation of the laws of the Member States relating to electromagnetic compatibility. Lenovo cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the installation of option cards from other manufacturers.

This product has been tested and found to comply with the limits for Class A equipment according to European Standards harmonized in the Directives in compliance. The limits for Class A equipment were derived for commercial and industrial environments to provide reasonable protection against interference with licensed communication equipment.

Lenovo, Einsteinova 21, 851 01 Bratislava, Slovakia



**Warning:** This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## **Germany Class A statement**

**Deutschsprachiger EU Hinweis: Hinweis für Geräte der Klasse A EU-Richtlinie zur Elektromagnetischen Verträglichkeit**

**Deutschsprachiger EU Hinweis: Hinweis für Geräte der Klasse A EU-Richtlinie zur Elektromagnetischen Verträglichkeit** Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2014/30/EU zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der Klasse A der Norm gemäß Richtlinie.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der Lenovo empfohlene Kabel angeschlossen werden. Lenovo übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung der Lenovo verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung der Lenovo gesteckt/eingebaut werden.

## **Deutschland:**

**Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Betriebsmitteln** Dieses Produkt entspricht dem „Gesetz über die elektromagnetische Verträglichkeit von Betriebsmitteln“ EMVG (früher „Gesetz über die elektromagnetische Verträglichkeit von Geräten“). Dies ist die Umsetzung der EU-Richtlinie 2014/30/EU in der Bundesrepublik Deutschland.

**Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Betriebsmitteln, EMVG vom 20. Juli 2007 (früher Gesetz über die elektromagnetische Verträglichkeit von Geräten), bzw. der EMV EU Richtlinie 2014/30/EU, für Geräte der Klasse A.**

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen. Verantwortlich für die Konformitätserklärung nach Paragraf 5 des EMVG ist die Lenovo (Deutschland) GmbH, Meitnerstr. 9, D-70563 Stuttgart.

Informationen in Hinsicht EMVG Paragraf 4 Abs. (1) 4: **Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55032 Klasse A.**

Nach der EN 55032: „Dies ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funkstörungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen durchzuführen und dafür aufzukommen.“

Nach dem EMVG: „Geräte dürfen an Orten, für die sie nicht ausreichend entstört sind, nur mit besonderer Genehmigung des Bundesministers für Post und Telekommunikation oder des Bundesamtes für Post und Telekommunikation betrieben werden. Die Genehmigung wird erteilt, wenn keine elektromagnetischen Störungen zu erwarten sind.“ (Auszug aus dem EMVG, Paragraph 3, Abs. 4). Dieses Genehmigungsverfahren ist nach Paragraph 9 EMVG in Verbindung mit der entsprechenden Kostenverordnung (Amtsblatt 14/93) kostenpflichtig.

Anmerkung: Um die Einhaltung des EMVG sicherzustellen sind die Geräte, wie in den Handbüchern angegeben, zu installieren und zu betreiben.

## **Japanese electromagnetic compatibility statements**

### **Japan VCCI Class A statement**

この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波障害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 V C C I - A

### **Japanese Electrical Appliance and Material Safety Law statement (for detachable AC power cord)**

本製品およびオプションに電源コード・セットが付属する場合は、それぞれ専用のものになっていますので他の電気機器には使用しないでください。

## JEITA harmonics guideline - Japanese Statement for AC power consumption (W)

定格入力電力表示

(社) 電子情報技術参照委員会 家電・汎用品高調波抑制対策ガイドライン  
実行計画書に基づく定格入力電力値： W

お手持ちのユニットの定格入力電力値(W)はユニットの電源装置に貼付  
されている電源仕様ラベルをご参照下さい

## JEITA harmonics guideline - Japanese Statement of Compliance for Products Less than or Equal to 20A per phase

### JEITA 高調波電流抑制対策適合品表示 (JEITA harmonics statements– Japan)

定格電流が 20A/相以下の機器 (For products where input current is less than or equal to 20A per phase)

日本の定格電流が 20A/相 以下の機器に対する高調波電流規制高調波電流規格  
JIS C 61000-3-2 適合品

## JEITA harmonics guideline - Japanese Statement of Compliance for Products More than 20A

定格電流が 20A/相を超える機器 (For products where input current is less than 20A/Phase of one PSU, but total system power is over 20A/Phase)

本製品は、1相当たり20Aを超える機器ですが、個々のユニットが「高調波電流規格 JIS C 61000-3-2適合品」であり、  
本製品はその組み合わせであるため、「高調波電流規格 JIS C 61000-3-2適合品」としてあります

## Korea Communications Commission (KCC) statement

이 기기는 업무용(A급)으로 전자파적합기기로  
서 판매자 또는 사용자는 이 점을 주의하시기  
바라며, 가정외의 지역에서 사용하는 것을 목  
적으로 합니다.

This is electromagnetic wave compatibility equipment for business (Type A). Sellers and users need to pay attention to it. This is for any areas other than home.

## Russia Electromagnetic Interference (EMI) Class A statement

**ВНИМАНИЕ!**

Настоящее изделие относится к оборудованию класса А. При использовании в бытовой обстановке это оборудование может нарушать функционирование других технических средств в результате создаваемых промышленных радиопомех. В этом случае от пользователя может потребоваться принятие адекватных мер.

## People's Republic of China Class A electronic emission statement

中华人民共和国“A类”警告声明

### 声明

此为A级产品，在生活环境中，该产品可能会造成无线电干扰。在这种情况下，可能需要用户对其干扰采取切实可行的措施。

## Taiwan Class A compliance statement

警告使用者：  
這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

## Taiwan BSMI RoHS declaration

單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr <sup>6+</sup> )	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
機架	○	○	○	○	○	○
外部蓋板	○	○	○	○	○	○
機械組零件	-	○	○	○	○	○
空氣傳動設備	-	○	○	○	○	○
冷卻組零件	-	○	○	○	○	○
內存模塊	-	○	○	○	○	○
處理器模塊	-	○	○	○	○	○
鍵盤	-	○	○	○	○	○
調製解調器	-	○	○	○	○	○
監視器	-	○	○	○	○	○
滑鼠	-	○	○	○	○	○
電纜組零件	-	○	○	○	○	○
電源	-	○	○	○	○	○
儲備設備	-	○	○	○	○	○
電池匣組零件	-	○	○	○	○	○
電池	-	○	○	○	○	○
有mech的電路卡	-	○	○	○	○	○
無mech的電路卡	-	○	○	○	○	○
雷射器	-	○	○	○	○	○
<p>備考1. “超出0.1 wt %” 及 “超出0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。            Note1 : “exceeding 0.1wt%” and “exceeding 0.01 wt%” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.</p> <p>備考2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。            Note2 : “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.</p> <p>備考3. “-” 係指該項限用物質為排除項目。            Note3 : The “-” indicates that the restricted substance corresponds to the exemption.</p>						

---

# Index

## A

assistance, getting 31  
Australia Class A statement 38

## C

Canada Class A electronic emission statement 38  
China Class A electronic emission statement 41  
Class A electronic emission notice 38  
contamination, particulate and gaseous 37  
creating a personalized support web page 33  
custom support web page 33

## D

documentation  
    using 32  
DSA, sending data 32

## E

electrical equipment, servicing v  
electronic emission Class A notice 38  
European Union EMC Directive conformance statement 38

## F

FCC Class A notice 38

## G

gaseous contamination 37  
Germany Class A statement 38  
guidelines  
    servicing electrical equipment v  
    trained service technicians iv

## H

hardware service and support telephone numbers 33  
help  
    from the World Wide Web 32  
    from World Wide Web 32  
    sending diagnostic data 32  
    sources of 31

## I

important notices 36  
information center 32  
inspecting for unsafe conditions iv

## J

Japanese electromagnetic compatibility statements 39

## K

Korea Class A electronic emission statement 40

## N

New Zealand Class A statement 38  
notes, important 36  
notices 1, 35  
    electronic emission 38  
    FCC, Class A 38

## P

particulate contamination 37  
People's Republic of China Class A electronic emission statement 41  
product service, Taiwan 33

## R

Russia Class A electronic emission statement 40

## S

safety iii  
safety statements iii, vi  
sending diagnostic data 32  
service and support  
    before you call 31  
    hardware 33  
    software 33  
servicing electrical equipment v  
software service and support telephone numbers 33  
statements and notices 1  
support web page, custom 33

## T

Taiwan BSMI RoHS declaration 42  
Taiwan Class A electronic emission statement 41  
Taiwan product service 33  
telecommunication regulatory statement 37  
telephone numbers 33  
trademarks 36  
trained service technicians, guidelines iv

## U

United States FCC Class A notice 38  
unsafe conditions, inspecting for iv





**Lenovo**<sup>™</sup>